

Information and installation instructions for self-adhesive mounting bases



HellermannTyton uses different types of adhesives for self-adhesive bases: acrylate and synthetic rubber. These differ in the operating temperature range and the 'pull off' force of the adhesive. Synthetic rubber has an excellent initial grip, allowing for almost immediate use.

Acrylate adhesive has less initial grip, so there might be a need to wait for a few hours before use (depending on the surface), but has a higher, "pull off" force than synthetic rubber. This enables a permanent fixing lasting months or even years.


Instructions for use




1. The surface must be dry, free from dust, oil, oxides, parting agents and other impurities. The surface to be glued should be cleaned using a clean cloth and isopropanol/water (50/50). When using other appropriate cleaning agents, ensure that they do not attack the surface nor leave any residues. After cleaning allow the surface to air-dry completely.

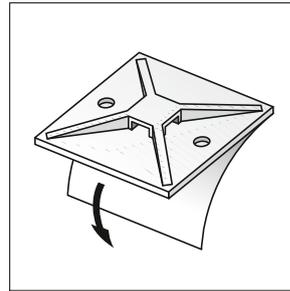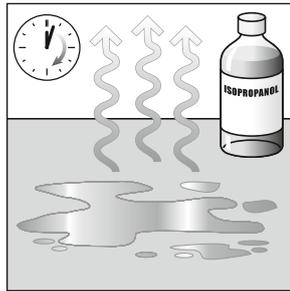

2. Peel off protective backing and ensure the adhesive area is not touched.

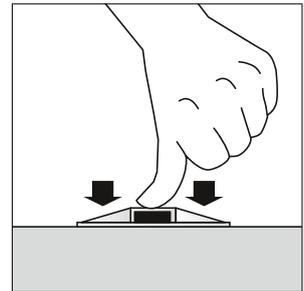

3. Press down firmly on the base with the thumbs for several seconds.

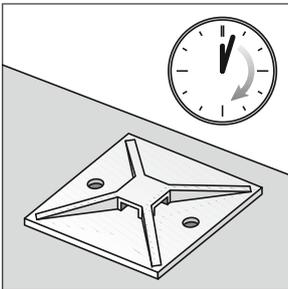

4. Depending on the type of adhesive, wait for several minutes (synthetic rubber) or hours (acrylate) so that the adhesive can bond completely with the surface.



We will be happy to send you on request an up-to-date technical datasheet for whichever adhesive you are using.